



The Sample Identification number includes the monitoring well [or soil vapor monitoring point] location it was collected from.
Example: MW-22_110717 is Monitoring Well location MW-22 sampled on November 7, 2017.

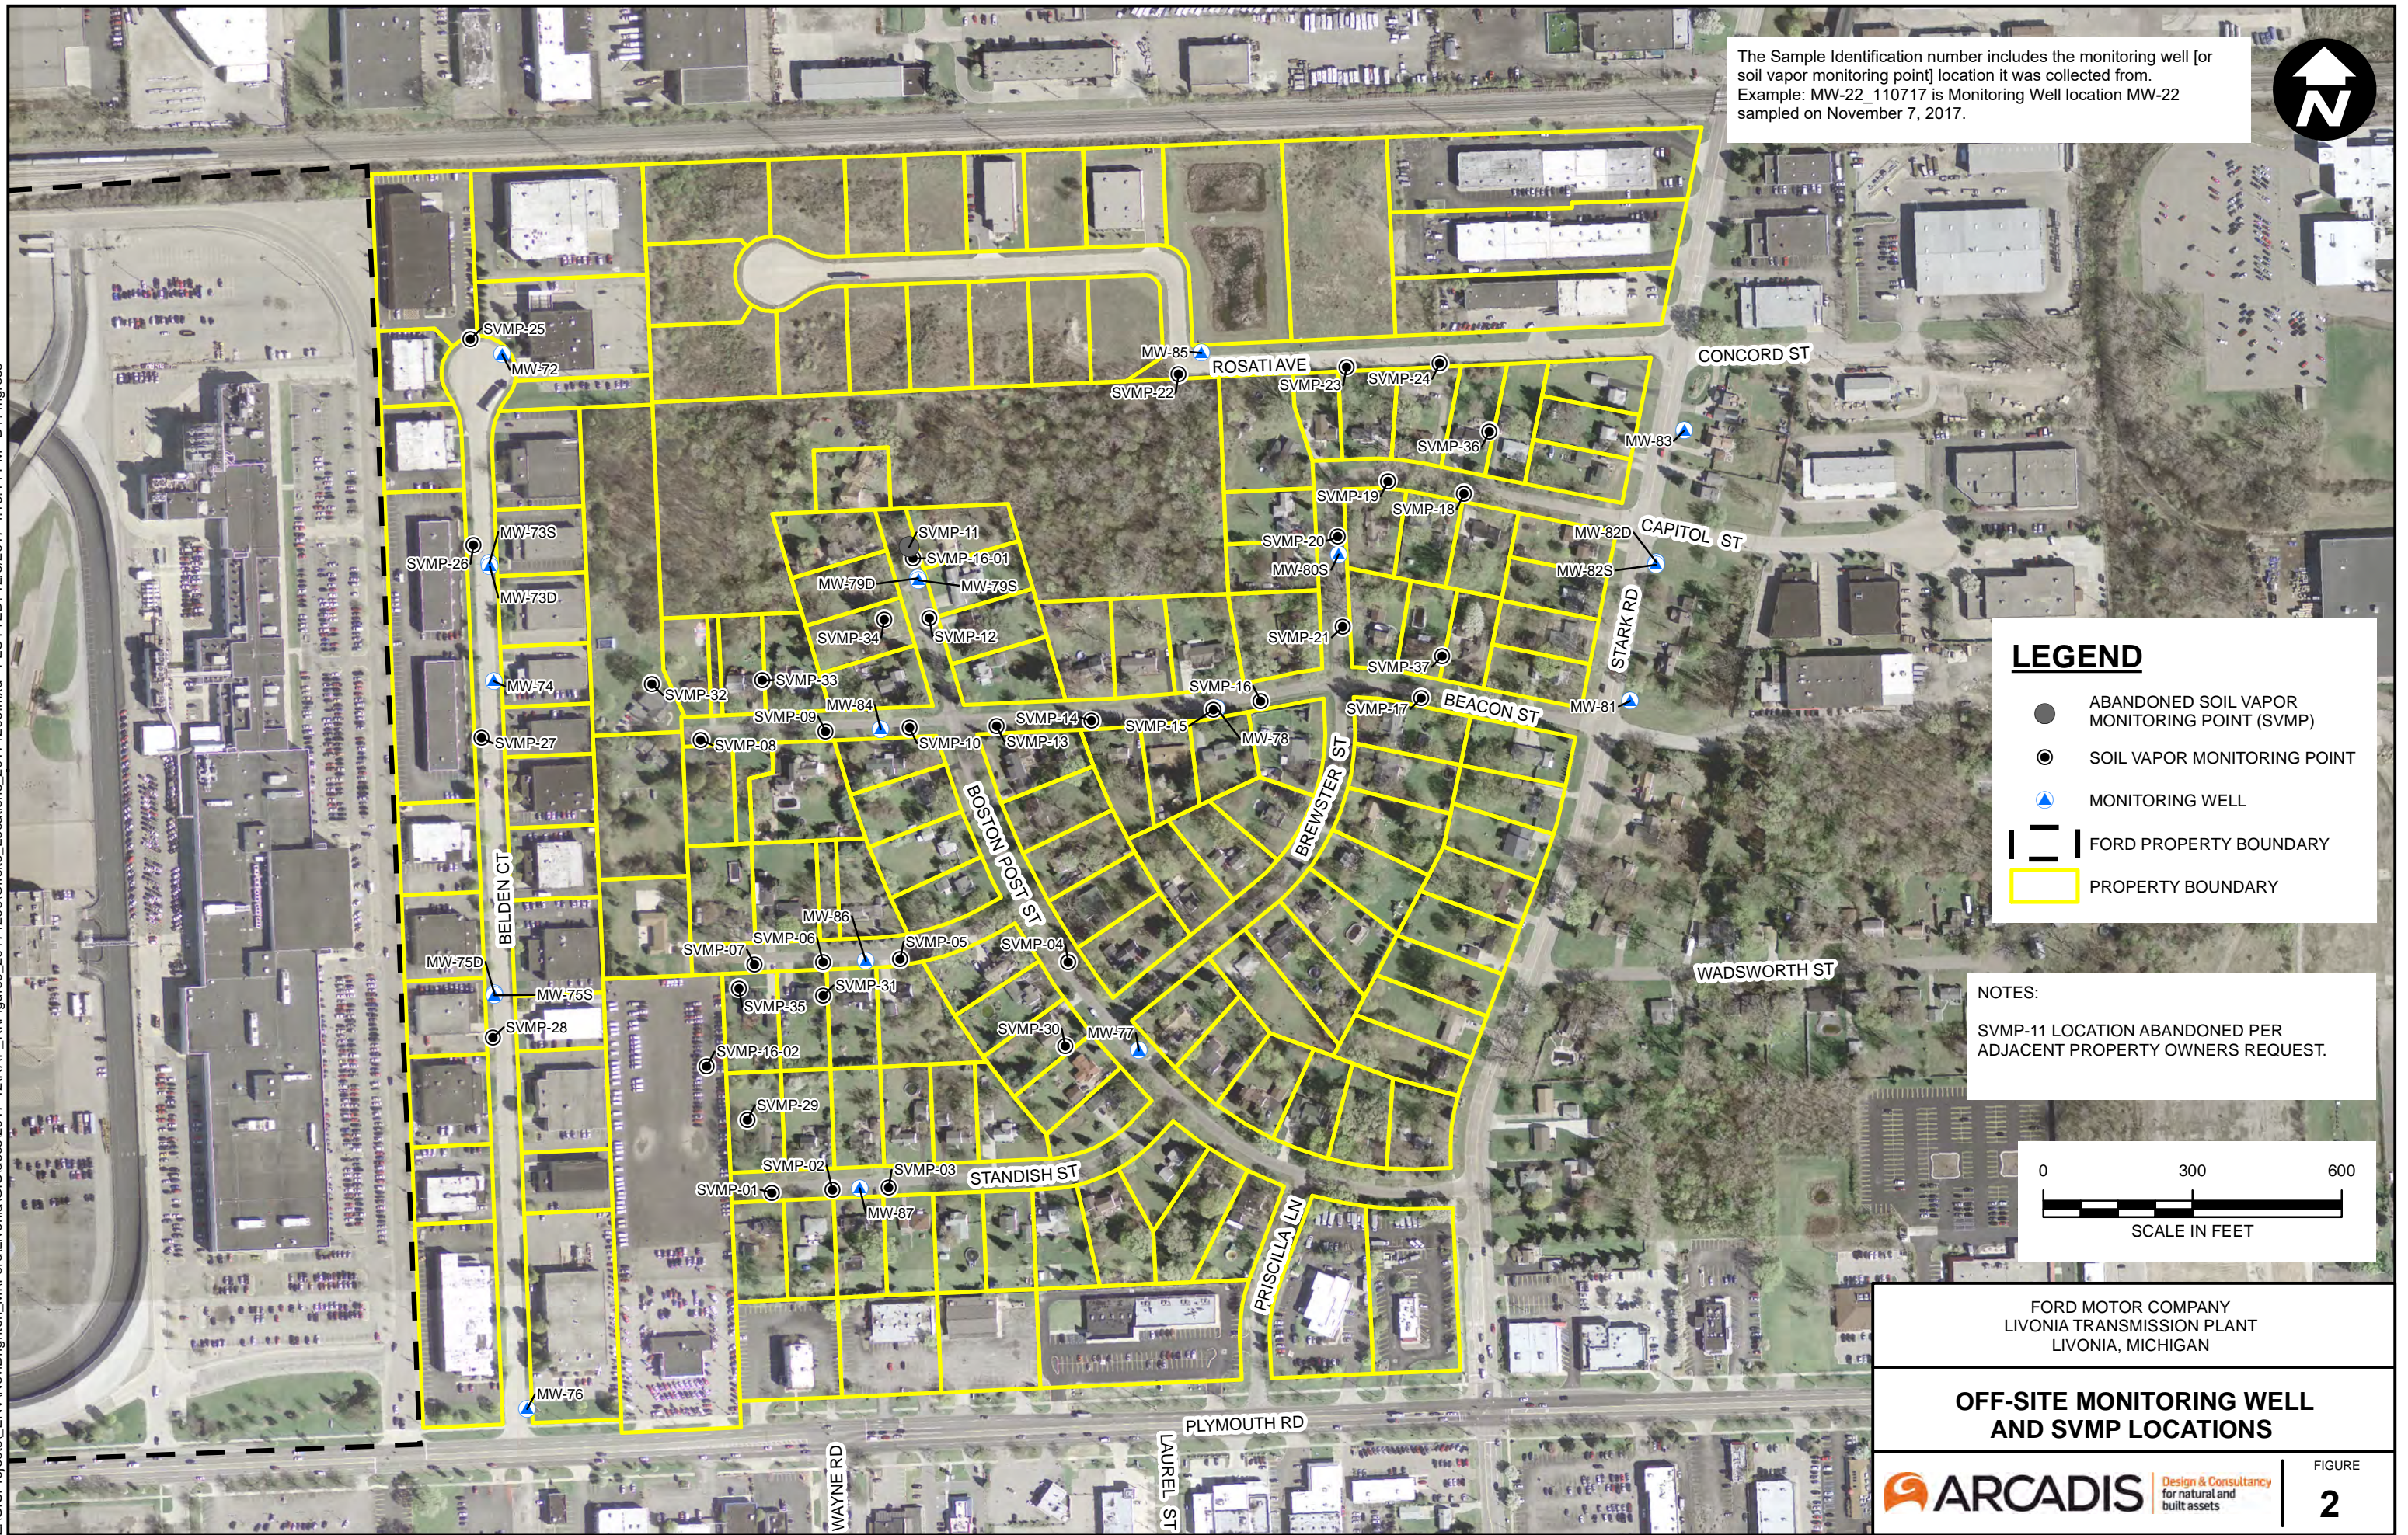

LEGEND

- ABANDONED SOIL VAPOR MONITORING POINT (SVMP)
- SOIL VAPOR MONITORING POINT
- ▲ MONITORING WELL
- FORD PROPERTY BOUNDARY
- ▭ PROPERTY BOUNDARY

NOTES:
SVMP-11 LOCATION ABANDONED PER ADJACENT PROPERTY OWNERS REQUEST.

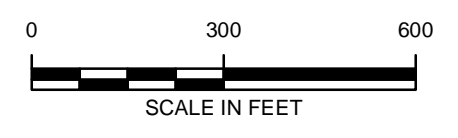

FORD MOTOR COMPANY
LIVONIA TRANSMISSION PLANT
LIVONIA, MICHIGAN

OFF-SITE MONITORING WELL AND SVMP LOCATIONS

ARCADIS Design & Consultancy
for natural and built assets

FIGURE
2